


American DJ® BU-350

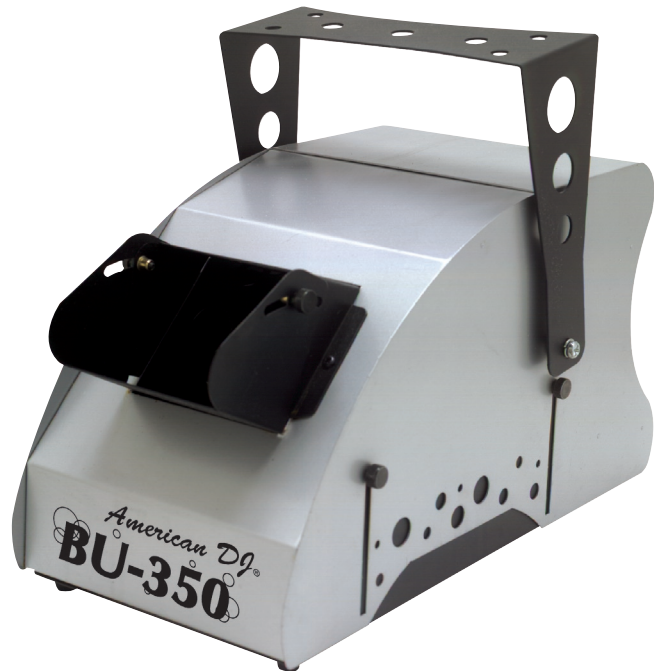

User Instructions

American DJ
4295 Charter Street
Los Angeles Ca. 90058
www.americandj.com

BU-350™

Introduction

Unpacking:

Thank you for purchasing the BU-350™ by American DJ®. Every BU-350™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please, do not return this unit to your dealer without first contacting customer support.

Instructions:

Bubbles, bubbles and more bubbles! The BU-350 is a high output bubble machine capable of creating hundreds of bubbles a minute. This unit comes with a detachable timer remote that will allow the unit to be controlled remotely. To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. Be sure you understand these instructions completely before attempting to operate this unit.

Customer Support:

American DJ® provides a toll free customer support line, to provide set up and installation help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Toll free customer service hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2610

E-mail: support@americandj.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt to make any type of repair yourself without the manufactures consent, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact American DJ® customer support for further instructions.

BU-350™**Precautions**

- Keep the outside of this device dry at all times. Do not spill water or other liquids into or on to your unit. Be sure all bubble juice is kept inside the fluid tray! To prevent fire or shock hazard, do not expose this product to rain or moisture.
- Do not spill water or other liquids into or on to your unit
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short
- Disconnect from main power before making any type of connection
- Do not remove the cover under any conditions. There are no user serviceable parts inside
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall
- Do not attempt to operate this unit, if it becomes damaged
- This unit is intended for indoor use only, use of this product outdoors voids all warranties
- During long periods of non-use, disconnect the unit's main power
- Always mount this unit in safe and stable matter
- Power cords should be routed so they are not likely to be walked on, pinched by items placed upon or against them.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the unit.
 - C. The unit has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

BU-350™**Reset Breaker**

This unit uses a protective breaker to protect the unit in the event of power surges or fluctuations. To reset the breaker, push the breaker button in until you hear it pop back in to place. If the breaker continues to pop, stop using the unit and contact customer support the unit may require service.

BU-350™**Features**

- High velocity fan
- Easy accessible fluid tray
- High bubble output
- Light weight
- Low current draw
- Built-In Hanging Yoke
- Rugged Rust Proof Construction
- On/Off power switch
- One tank makes hundreds of bubbles
- Optional Detachable Timer Remote Control

BU-350™**Product Registration**

The BU-350™ carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting customer support at (800) 322-6337.

BU-350™**Power Supply**

Power Supply: Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your American DJ® BU-350.™ The American DJ® BU-350™ is available in a 115v and 230v version. Because line voltage may vary from venue to venue, be sure to plug your unit into a matching wall outlet before attempting to operate.

BU-350™**General Instructions**

Please carefully read and understand the instructions in this manual thoroughly before attempting to operate this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

Filling the Tank Reservoir:

1. Place the BU-350™ on a flat level surface.
2. Loosen the four thumb screws on the sides of the unit.
3. Pull the BU-350™ straight up by the hanging bracket. This will expose the reservoir compartment.
4. Pull the black reservoir forward to remove it from the compartment.
5. Using premium American DJ® brand bubble juice, fill the fluid reservoir. Be sure not to over fill the reservoir to avoid spilling.
6. Once the reservoir has been filled, push the reservoir back into the compartment. Collapse the unit housing and tighten the thumb screws.

Operation:

Once the reservoir has been filled. You may place the unit on flat level surface or hang the unit in a level position. Flip the power switch to on position and watch the bubbles come out by the hundreds. Be sure the unit remains in a level position to avoid accidental leaking. Use the directional flap located on the exhaust section to control bubble spread.

Remote Operation (Optional):


The unit may be used with an *optional* detachable timer remote that may be used to control an output interval and duration. Always be sure to connect the remote to the 1/4" jack on the rear of the unit prior to applying main power.

Remote Operation:

1. Plug the remote control into the unit.
2. Flip the main power switch on the unit to the "ON" position.
3. Push the power button on the remote to the "ON" position, main power will be indicated by a glowing red LED above the remote power button.
4. For a constant steady stream of bubbles press the "CONSTANT" button in, an amber LED will glow indicating the unit is in constant output mode. OR press the "TIMER" button for timer operation, a green LED will glow indicating the unit is in timer mode.
5. For timer mode operation see the next section.

Time Knob - This knob is used to control the time interval between blast when the unit is in "TIMER" mode. The time interval can be adjusted to range from 3 seconds to 1 minute. Turning the knob in a clockwise direction will increase the interval.

Duration Knob - This knob is used to control the blast duration when the unit is in "TIMER" mode. The blast duration can range from 3 seconds to 1.5 minutes. Turning the knob in clockwise direction will increase the duration.

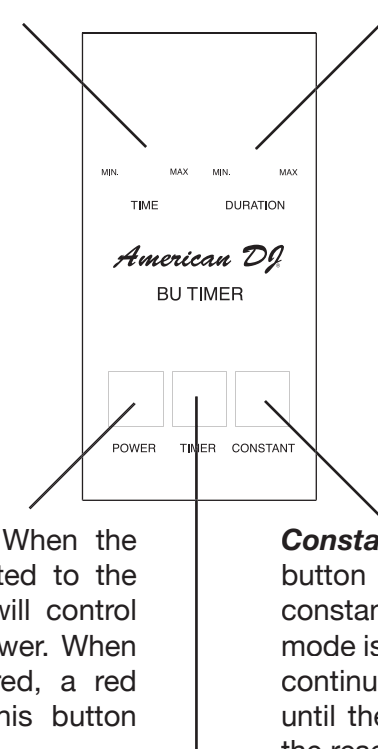

Power Button - When the remote is connected to the unit, this button will control the unit's main power. When the unit is powered, a red LED above this button will glow.

Constant Button - This button is used to activate constant mode. When this mode is activated the unit will continually produce bubbles until the unit is turned off or the reservoir is emptied.

Timer Button - This button activates timer mode. When this mode is activated a green LED above this button will glow. Use the "TIME" and "DURATION" knobs to adjust the timer settings.

ONE YEAR (365 DAYS) LIMITED WARRANTY

A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of one year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

MODEL: BU-350™

VOLTAGE*:	120V~50Hz / 220V~60Hz
DIMENSIONS: (Tray Closed)	14.75 x 9" x 11" / 375 x 230 x 279 mm
WEIGHT:	10 Lbs. / 4.5 kgs
BREAKER:	3 AMP
WORKING POSITION:	FLAT LEVEL POSITION
COOLING:	FAN COOLED
DUTY CYCLE:	NONE

* Voltage is preset at the factory and is not user selectable

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

©American DJ®

A Division of the American DJ Group of Companies

World Headquarters:

4295 Charter Street Los Angeles, CA 90058 USA

Tel: 323-582-2650 Fax: 323-582-2610

Web: www.americandj.com E-mail: info@americandj.com