

DMX Operation

Press the MODE button to view the DMX address setting menu 

Select the DMX starting address for buit-in controller using the UP and DOWN buttons.

Select DMX Channel mode by pressing MODE button to view 
Then press F/S to enter, use UP and DOWN button to select.

 **6 Channel Mode :**
6 channel DMX control

- Channel 1 : Rainbow
- Channel 2 : Red (0 -255)
- Channel 3 : Green (0 -255)
- Channel 4 : Blue (0 -255)
- Channel 5 : Strobe (1-20HZ)
- Channel 6 : Sound-active

 **3 Channel Mode :**
3 channel DMX control

- Channel 1 : Red (0 -255)
- Channel 2 : Green (0 -255)
- Channel 3 : Blue (0 -255)

There are 8 modes of self-running programs (value: 1-240) and one sound-active (value: 241-255) in Channel 6.

255	☐	Sound-active	Chase 1 : 1-30
240	☐	chase 8	Chase 2 : 31-60
210	☐	chase 7	Chase 3 : 61-90
180	☐	chase 6	Chase 4 : 91-120
150	☐	chase 5	Chase 5 : 121-150
120	☐	chase 4	Chase 6 : 151-180
90	☐	chase 3	Chase 7 : 181-210
60	☐	chase 2	Chase 8 : 121-240
30	☐	chase 1	Sound-active : 241-255
0	☐		

If DMX signal exists, signal in the display panel will flash.
The lighting fixture should be preserved in dry, cool and ventilated area.
The buit-in controller will automatically detect the presence of a DMX signal.