 



FIRMWARE UPDATE

The included version of Virtual DJ includes a Firmware update utility. It is necessary to install this. To update your VMS4:


1. Please check your computer audio setting and ensure that the VMS4 is not set as a default playback, playback recording, or MIDI device. This will interfere with the update and software applications.
2. Click the start menu > All Programs > Virtual DJ > FIRMWARE Update.
3. Select the VMS4 or USB Audio Device (Windows XP). Load the update file by clicking browse and going to the file location.

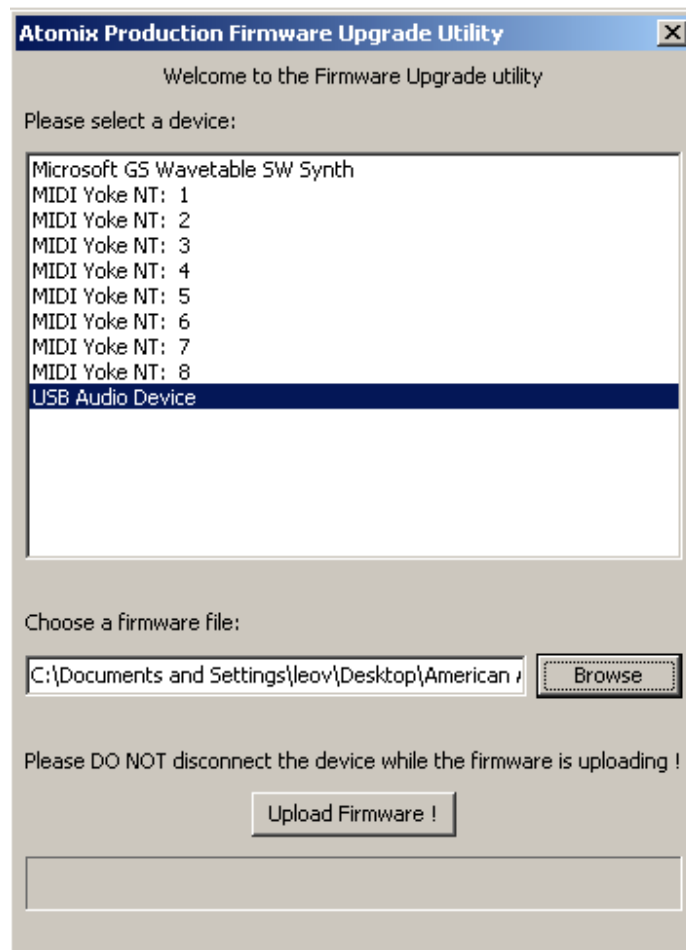

 FIRMWARE UPDATE

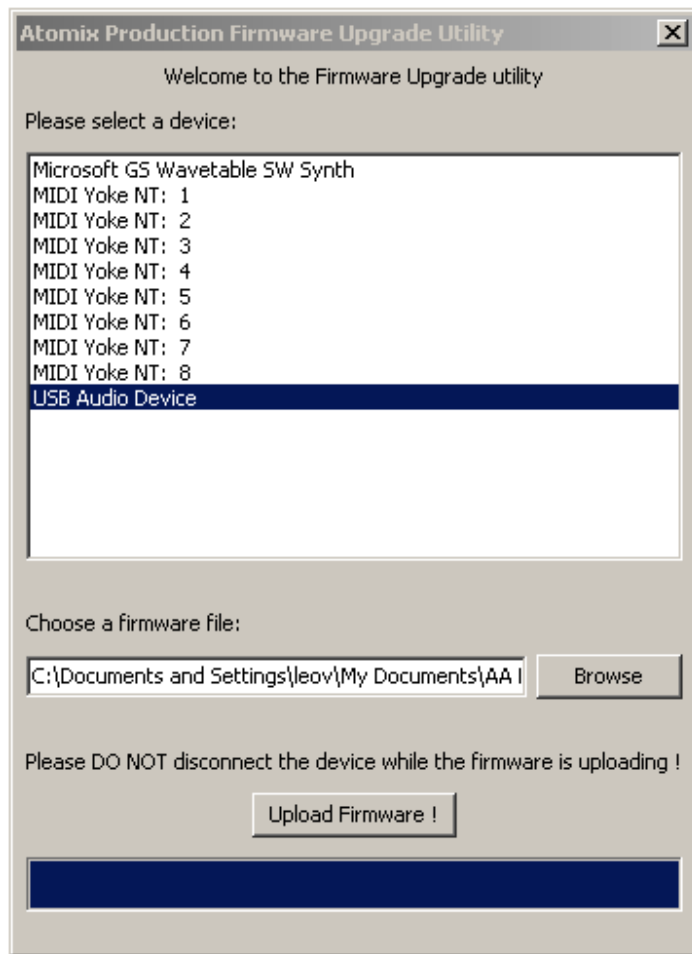

 4. Wait until the bar is filled in completely and "Upgrade Complete" is displayed.

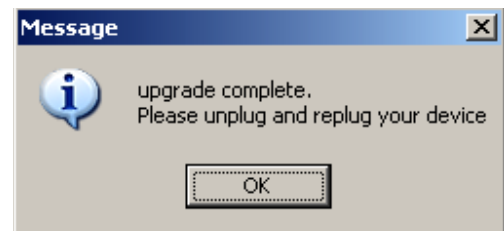


5. Unplug the USB and shut down the VMS4.

You may receive some Error windows like you see below.



 Select proper device in device select window.

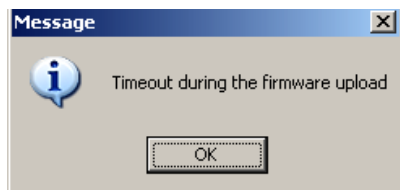

Please check your computer audio setting and ensure that the VMS4 is not set as a default playback, playback recording, or MIDI device. This will interfere with the update and software applications. Also, make sure that any software that uses MIDI or the Audio interface is closed.